



• **POPCORN MAKER WITH CART - USE INSTRUCTIONS**

Cod.: BT.650Y

GENERAL SAFETY ADVICE

READ THE OPERATING INSTRUCTIONS CAREFULLY BEFORE FIRST USE OF THE APPLIANCE.

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable. The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources.

It is recommended not to throw these packing material in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Never pull the supply cord to unplug the appliance.

Make sure that the supply cord never comes into contact with hot or cutting surfaces

Do not use this appliance if the supply cord is damaged. In case of damage, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Only connect this appliance on alternating current

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

This appliance is to be destined to its special purpose only.

Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

To avoid any heating risk, it is recommended to unroll completely the supply cord and to unplug the appliance, when not used.

Before cleaning, always unplug the appliance.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not hold the appliance with wet hands or feet.

Do not hold the appliance with naked feet.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail.

Do not use the appliance near explosives, highly flammable materials, gases, burning flames, heaters.

Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance used by or near children.

Make sure that children do not play with this appliance.

If you decide not to use the appliance any longer, make it unserviceable by simply cutting the supply cable after disconnecting the plug from the socket.

ALSO MAKE ANY DANGEROUS PARTS UNSERVICEABLE, ESPECIALLY FOR CHILDREN WHO COULD PLAY WITH THE APPLIANCE.

Some warnings:

1. Never immerse the product and the power cord in water or other liquids.
2. Do not use abrasive substances or materials to clean the appliance.
3. Never leave the appliance unattended while in use, especially in the presence of children.
4. Never force the kettle arms to avoid ruining it.
5. Always unplug the power plug when the product is not in use and before cleaning the appliance and / or before removing or adding a component.
6. Do not wash any components in the dishwasher.
7. **THIS APPARRECCHIO IS NOT A TOY.**
8. Always keep the door closed during use.
9. If you notice any damage to the components, contact the service center immediately.
10. Do not use outdoors.
11. Pay attention to the power cord during use as it will remain taut and may cause people to fall.
12. When moving, be careful not to make sudden movements.
13. Do not use the product for purposes other than those for which it is intended.
14. Before switching the appliance on, make sure that there are no improper items inside it.
15. Make sure that the rack is correctly installed before turning on the appliance.
16. Do not use the product with an external timer or with a separate remote control system.
17. When the popcorns are ready, disconnect the appliance from the electrical outlet.

Product description:

1. Motor body
2. Kettle
3. Arms
4. Device on / off button
5. Light on / off button
6. Device power cord
7. Kettle power cord
8. Graduated spoon (large side for corn - small side for oil)
9. Bowl for popcorn collection.



Assembly:

The appliance will arrive almost completely assembled.

It will be necessary only to place the basket over the arms by sliding it into the appropriate spaces, and then fix it, screwing the side lever complete with knob.

Use:

On first use, after having removed the packaging and verified that all the parts are present and in good condition, clean the product as indicated in the paragraph "Cleaning and Maintenance" then proceed as follows:

Make sure the basket is mounted correctly.

Make sure the appliance is switched off and then connect the electric wire inside the machine with the switch located under the base of the kettle.

Switch the appliance on using the special power button located on the upper part of the motor body. Allow the appliance to run empty for a few minutes to allow the kettle to heat up.

Switch off the appliance.

With the measuring cup supplied (small side) insert 2/3 tablespoons of cooking oil into the basket.

With the measuring cup supplied (large side) insert 2/3 tablespoons of corn kernels in the basket.

Close the basket, close the door and switch on the appliance.

After a few minutes the popcorns will start to come out of the kettle.

When the seeds have stopped crackling, turn the lever with the red knob on the side to topple the popcorn from the basket to the container.

Warning: If you notice smoke during operation, it may be due to a residual amount of grease remaining in the kettle, so it is recommended to clean the basket immediately after each use.

Cleaning and Maintenance:

Make sure the appliance has cooled down before cleaning it and then unplug the power cord from the electrical outlet and the cord from the basket.

Clean the inside of the appliance and the basket with a slightly damp cloth and then dry thoroughly with a clean, dry cloth.

Wash the popcorn container with soap and water, then dry thoroughly with a clean, dry cloth.

Make sure all parts are dry and clean before storing the appliance or before using it again.

NOTE: NEVER immerse the basket, the motor body and the power cord in water or other liquid. DO NOT wash in the dishwasher.

TECHNICAL DATA

Power 310W

Power supply 220-240V-50/60Hz

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice



1




2



3



4

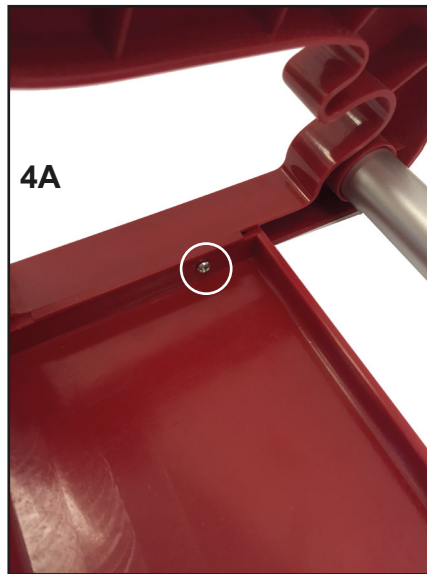

4A



5

ASSEMBLY

FIGURE 1

Join the legs with the two support bars and fix them with the four screws provided.

FIGURE 2

Insert the legs of the trolley and fix them from the inside with the four screws provided.

FIGURE 3

Insert the two wheels and fix them with the two screws complete with washers, once fixed cover the screws with the two red caps supplied.

FIGURE 4

Assemble the handle (tube + two side parts + central shelf) and fix the two supplied screws from the inside.

FIGURE 5

Join the handle to the rest of the trolley and secure it with the two supplied screws.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

The guarantee is valid only with a guaranty certificate and proof of purchase (fiscal receipt) indicating the date of purchase and the model of the appliance

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

GUARANTEE CONDITIONS

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- The appliance has not been tampered with, otherwise it is not maintainable.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) the aesthetic parts are excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, carelessness, wrong or improper installation, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

In any case, if the part to be replaced for defect, breakage or malfunction is an accessory and/or a detachable part of the product, Beper reserves the right to replace only the very part in question and not the entire product

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR ATER SALES DEPARTMENT BEPER. E-MAIL assistenza@beper.com WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.

beper

BEPER SRL

Via Salieri, 30

37050 - Vallese di Oppeano - Verona

Tel. 045/7134674 – Fax 045/6984019

e-mail: assistenza@beper.com

beper.com

